





A Green Solutions Company™

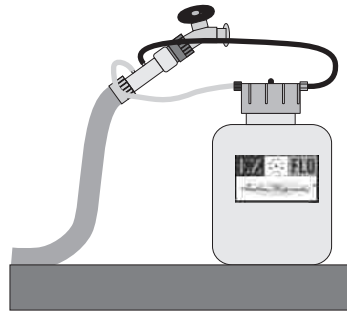

Hose/Drip Connection

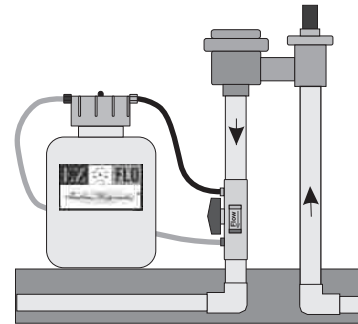

Optional Sprinkler/Drip Connection
Must use an EZ Ball Valve Connector (CBV)

EZ 2013-HB Features

Tank Capacity - Liquid:
Tank Capacity - Water Soluble Fertilizer:
Minimum Flow (Standard Hose Bib):
Minimum Flow (Ball Valve Coupling):
Adjustable Feed Ratio Range:
Water Volume to Empty Tank:

Approx. 1.33 Gal. (5.0 liters)
Recommended 8 lbs. (3.63 kg)
2 gallons/minute (7.6 liters/min.)
2.5 gallons/hour (9.5 liters/hr.)
1,000:1/Slow setting to 100:1/Fast setting
1,330 gal (5.03 kl)/Slow setting
133 gal (0.50 kl)/Fast setting
7" x 7" x 12" (18cm x 18cm x 30.5cm)
3 lbs. (1.36 kg)

Dimensions (LWH):
Approx. Weight:

EZ Ball Valve Coupling Connector Required for in-Line Installations.

Suggested Landscape Coverage under normal watering conditions*:

100% turf
75% turf/**25%** trees/shrubs/flowers
50% turf/**50%** trees/shrubs/flowers

Up to 5,250 sq ft (487 sq m)
Up to 6,200 sq ft (575 sq m)
Up to 9,000 sq ft (836 sq m)

*Assumes a refill frequency of 4-6 weeks and watering every other day. Turf requires more water and therefore increases refill frequency.

EZ 2013-HB

Warranty: One (1) year under normal pressure conditions and unit must not be allowed to contain pressure when idle. Normal pressure conditions are when operating line pressures does not exceed 80 PSI (5.5 bars). See www.ezflofertilizing.com/warranty.asp for further information.

Includes:

Hose bib adapter with US Standard Threads, tubing and tubing valves. British Standard Thread Adapters available (EZ-FLO part # 3G34 and part # 3H34). Does not include suitable back flow device which must be purchased separately. Optional Low Pressure Hose Vacuum Breaker (EZ-FLO part # 3050) available.

Optional Irrigation Line Connection:

Must be connected after the zone valve by using an EZ-FLO Ball Valve Connector (CBV). This connection option must be purchased separately.

This system connects directly to the hose bib for use with garden hose or drip watering systems. It can also be installed to support an in-ground irrigation system, **after any zone valve**, to feed through sprinklers or drip emitters. This unit can be connected to the irrigation piping by installing it with an appropriate EZ Ball Valve Connector (CBV). **This system should not be left under pressure when idle. It must be installed after back flow protection and downstream of any zone valve.** EZ-FLO's patented flow process automatically adjusts to changes in pressure and flow without changing fittings. This system is designed for the delivery of products that are designated as organic or non-hazardous.

A code compliant back flow prevention device is required for installation. Installation must follow local and state plumbing codes. Unless otherwise specified, either an atmospheric or pressure vacuum breaker devices are the minimum back flow prevention device required according to University of Southern California - Foundation for Cross Connection Control and Hydraulic Research.